


Stepper Motor Mounting

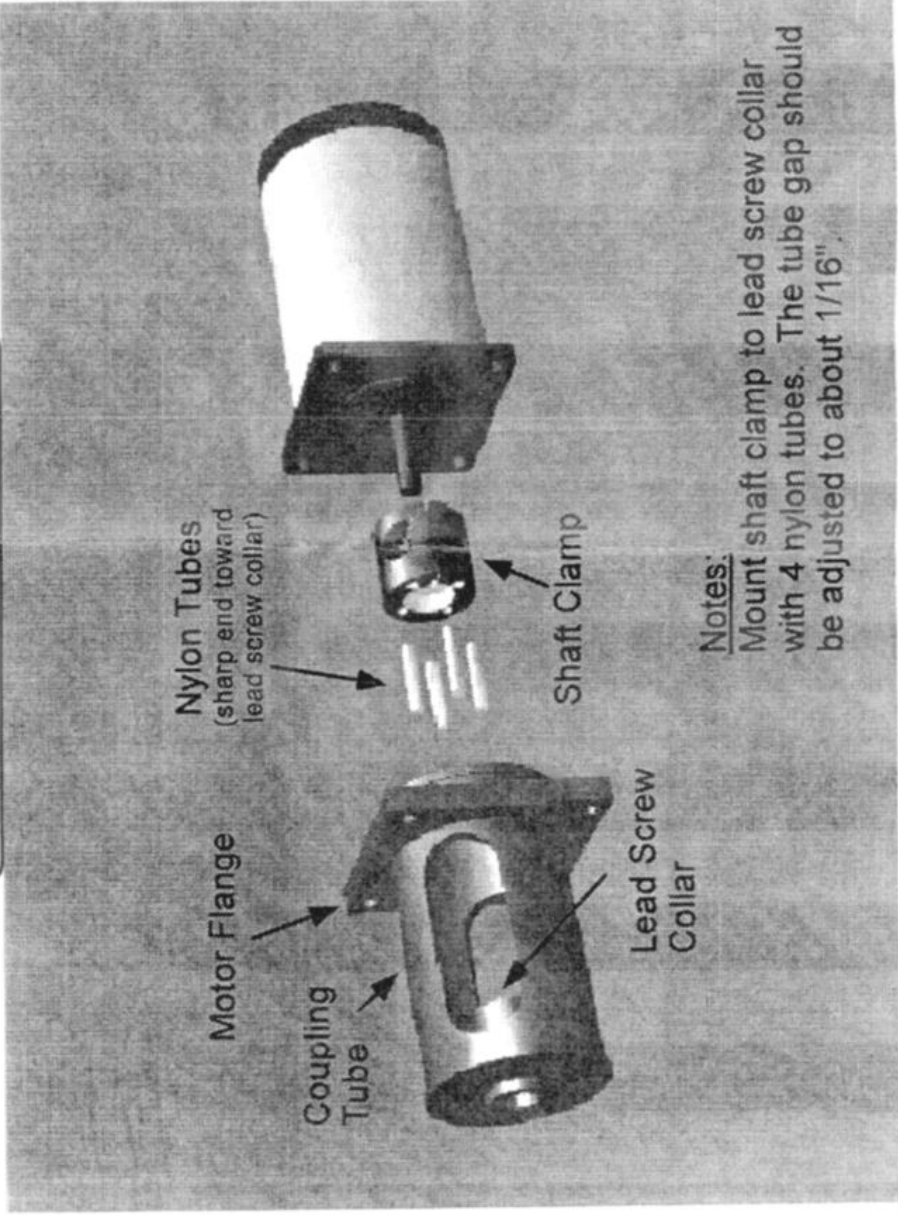

Notes:
Mount shaft clamp to lead screw collar with 4 nylon tubes. The tube gap should be adjusted to about 1/16".

Setting the Coupling Gap

